



# ProLite Handle Bar Mount


Part number HBML1

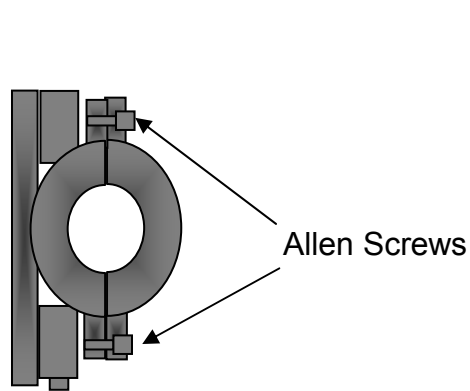


1. Disassemble mount by removing both Allen screws

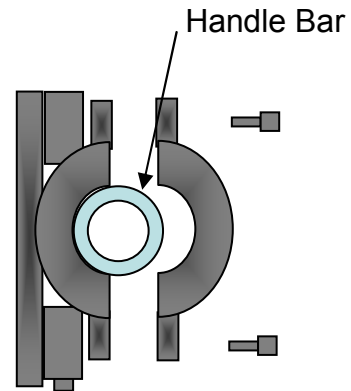

2. Place each half around handle bar & replace screws

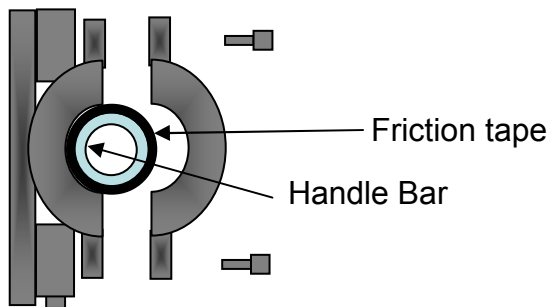

3. For handle bars less than 1 inch in diameter build up the handle bar by wrapping friction tape until the bar is 1 inch.

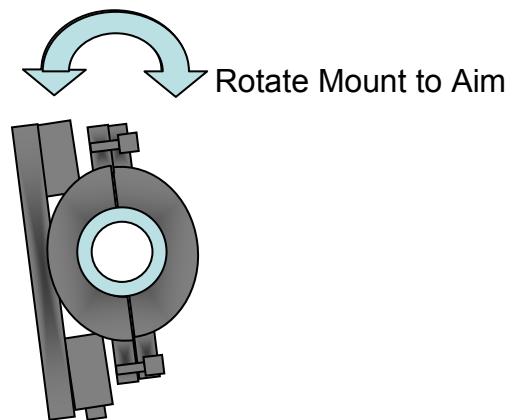

4. To aim light rotate the mount to desired position then tighten the Allen screws.